

E-Spray Hand Held Electrostatic Sprayer






Changing and cleaning nozzle

Remove battery from unit.

Insert nozzle wrench into nozzle cavity. Rotate wrench to engage the tabs on nozzle. Rotate counter clockwise, about 90 degrees, until the nozzle becomes loose. Remove nozzle and clean with warm water.

To re-install nozzle, insert nozzle into wrench lining up nozzle tabs with slots in wrench, insert nozzle and wrench into front opening of unit. Push in and rotate wrench clock wise approximately 90 degrees. Remove wrench, re-install battery.

To change to a different size spray, rotate nozzle face clockwise until the desired nozzle orifice lines up opposite of arrow or you hear a click sound indicating the tip is aligned correctly. The 80 micron (Green tip) is best suited for most products and will give you approximately 8 minutes per 33 ounces of product.

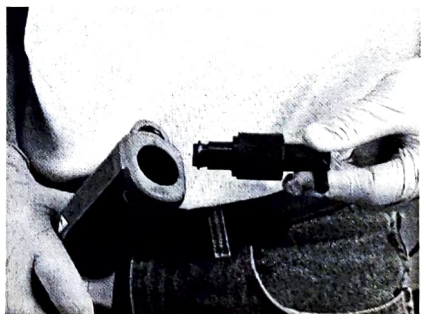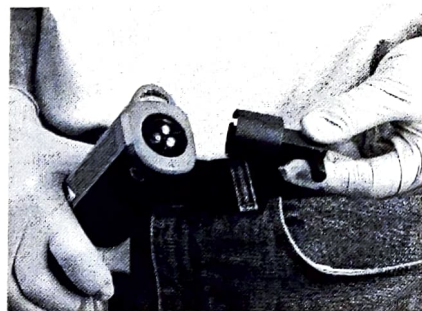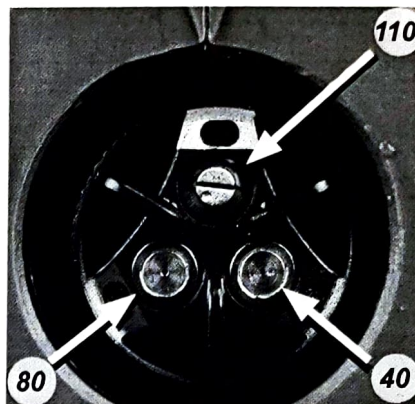

Nozzle Size	Square Feet per Tank	Minutes per Tank	Tanks per Charge	Ounces per Minute
40 red	3300	11	18	3
80 green	2400	8	24	4
110 white	900	3	80	11

Certified Products for Use in the E-Spray System

17 Odor-Rite Tropical Deodorizer
64 Millennium Q Disinfectant
128 E-Fecticide Disinfectant
256 Century Q Disinfectant
Chlorinated Tablets Disinfectant
Microcide TB disinfectant

PPE recommendation

- Latex gloves
- Wrap around eye protection
- N95 rated dust mask

Multi-Clean®

600 Cardigan Road
Shoreview, Minnesota 55126
Phone 651-481-1900
www.multi-clean.com

E-Spray Hand Held Electrostatic Sprayer

Operation instructions

Engage trigger lock by pressing black button above trigger. This will disable equipment from turning on while setting up. Fig 1

Rotate tank lock dial to unlock tank from sprayer. The white arrow will indicate lock or unlocked. Fig 2

While pulling tank release ring, grasp tank and pull downwards. Fig 3

Fill tank with 33 ounces of ready to use solution. You can use a wall mount dilution control center or a buddy jug for fast filling.

Insert filled tank into sprayer, rotate tank lock dial to secure tank to sprayer. Release trigger lock.





Battery must be fully charged, insert into battery socket.

To use the sprayer in the electrostatic mode, slide ON/OFF switch to ON. In the OFF position, the unit will not apply a charge to the spray.

Spray objects to be cleaned with a sweeping motion back and forth, for best results, spraying surfaces between 2 and 5 feet works best.

Spray walls using a spray width of 5 feet. A wall 8 feet tall will take approximately 10 seconds to cover. Moving slower will result in streaking of product.

During spraying, operator should maintain continuous hand contact with the silver grounding strap on the handle. Failure to do this may result in a slight shock. Fig 5

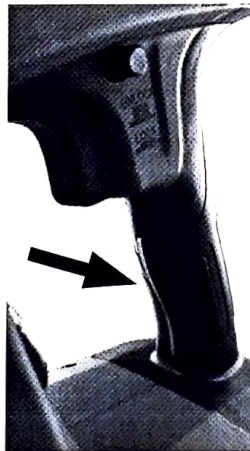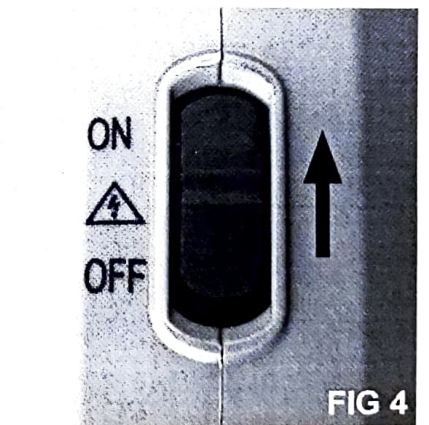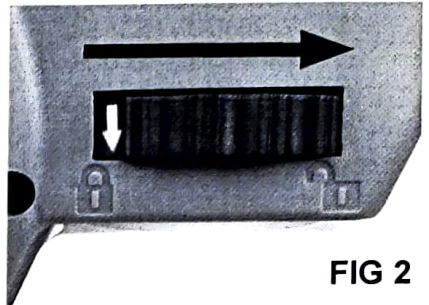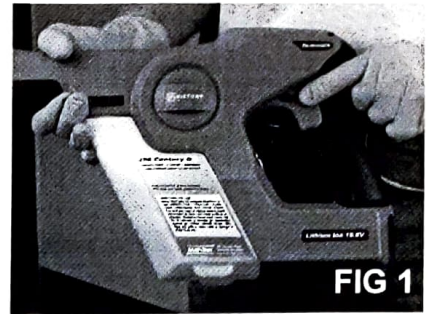

Maintenance

After Each use:

1. Empty solution container.
2. Re-Fill with warm water.
3. Spray the unit for a minimum of 10 seconds.
4. Empty container and stow in carrying case.

Monthly

1. Remove nozzle using the nozzle wrench
2. Rinse with cool water.
3. Soak in acidic delimer solution for 1 hour.
Alternately, soak in white vinegar for 1 hour.

Warranty

Warranty: 1 year parts and labor
Contact Multi-Clean for troubleshooting assistance.
Phone no. 651-481-1900

Warranty Claims: To file a warranty claim, contact the warranty administrator directly. Phone no. 800-741-7788

Email: customerservice@victorycomplete.com

Be prepared to provide date code and serial number located in the battery compartment and where the unit was purchased.

